


# SIDE BY Innovations

## Polaris RZR Rattle stop Installation Instructions

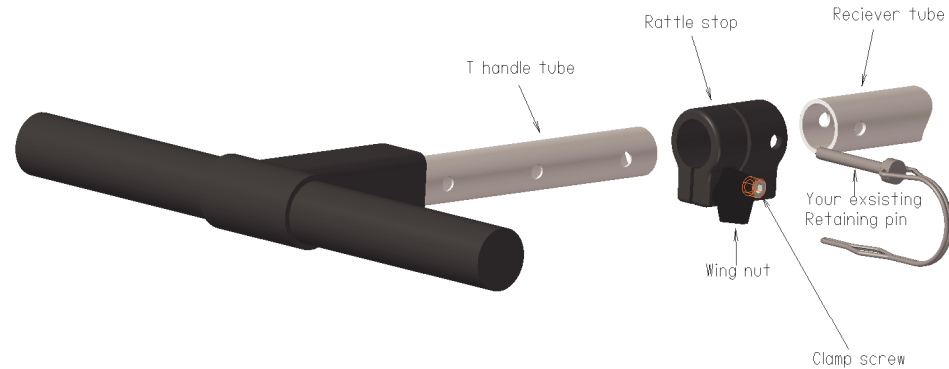

1. Remove the retaining pin and T-handle from the receiver tube.
2. Slide the large inside diameter end of the rattle stop over the receiver tube. Align the retainer pin hole in the rattle stop with the hole in the receiver tube.
3. Tighten the clamp screw to secure the rattle stop to the receiver tube.
4. Insert the T-handle tube to the desired adjustment hole.
5. Insert the retaining pin and latch it.
6. Tighten the wing nut to secure the T-handle tube.
7. Go enjoy the quiet ride of your Polaris RZR.

To adjust the handle position:

Loosen the wing nut.

Remove the retainer pin.

Move the handle to the desired hole.

Insert the retainer pin and latch it.

Tighten the wing nut.

Note: With the rattle stop installed you will lose the use of the adjustment hole which places the T-handle at the furthest location away from the passenger. We drilled an additional adjustment hole in our tube to re-gain most of the adjustment.