


# SIDE BY Innovations

## Break away side mirrors installation instructions

1. Remove the wing nut and the swivel from the hanger and set the mirror assembly aside for now.
2. Remove the two clamp screws and clamp.
3. Attach the hanger and clamp to the roll bar in the desired location using the two clamp screws. Make sure the cone bushing is facing the outside of the vehicle. Snug the clamp screws just enough so the hanger will stay in position but will rotate on the roll bar.
4. Place the swivel into the cone bushing, insert and snug the wing nut.
5. Rotate the hanger and clamp on the roll bar until the swivel and mirror assembly are horizontal.
6. Carefully remove the wing nut and the swivel. Make sure the hanger and clamp stay in position.
7. Tighten the two clamp screws. Again, be careful not to move the hanger.
8. Insert the swivel into the cone bushing and re-install the wing nut. Adjust the vertical mirror position by rotating the swivel inside the cone bushing. Tighten the wing nut to secure this position.
9. Adjust the horizontal mirror position by pushing forward or pulling back on the mirror assembly. Mirror assembly will rotate on the pivot screws.
10. Move to the other side and repeat steps 1 thru 9.

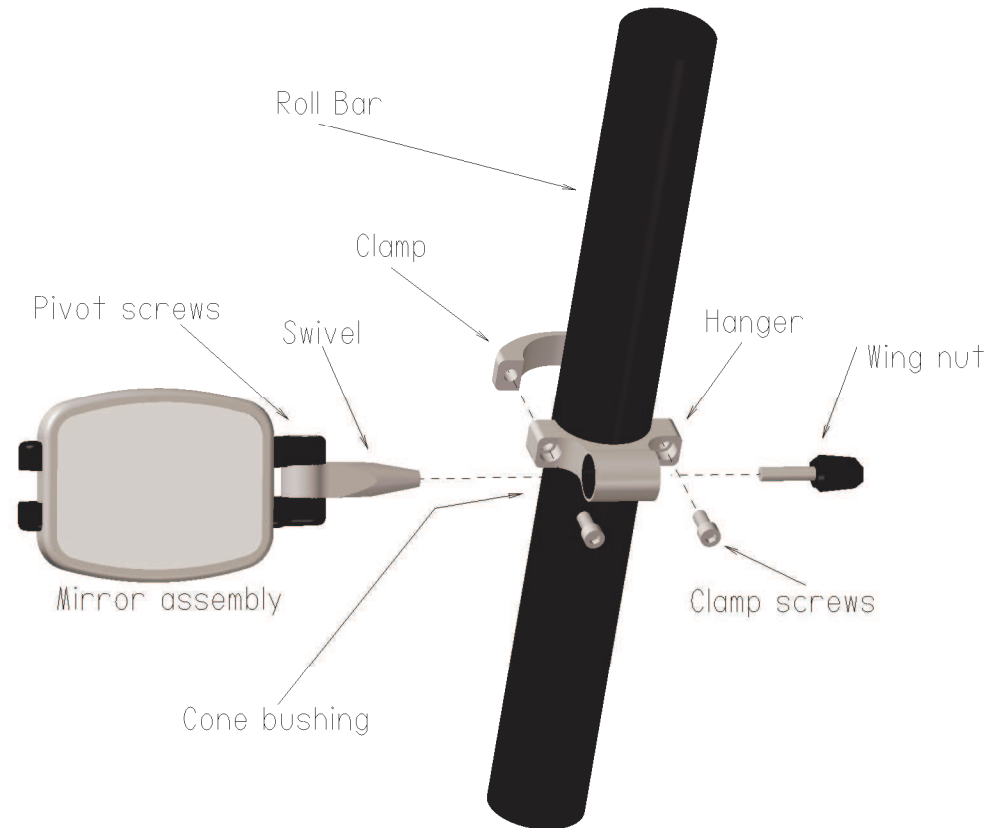

Note: The tension on the pivot action of the breakaway mirror is adjustable by tightening or loosening the two pivot screws as desired. Do not over-tighten or the mirror will become too hard to adjust and may not fold away as needed.

Use warm soapy water to clean mirrors. Do not use glass cleaner, harsh or abrasive cleaners.