


RMB01 Rear View Mirror Installation Instructions

1. Make sure the Adjustment Knob is tight so the Gimbal will hold the Pivot Plug in place during steps 2 and 3.
2. Remove the Screw and Lower Clamp Half as shown.
3. Place the Upper Clamp Half over the Roll Bar keeping the Pivot Plug in place as shown. Install the Lower Clamp Half and hold the two clamps together while re-installing the Screw. Leave the Screw loose enough so you can rotate the Clamp halves on the Roll Bar.

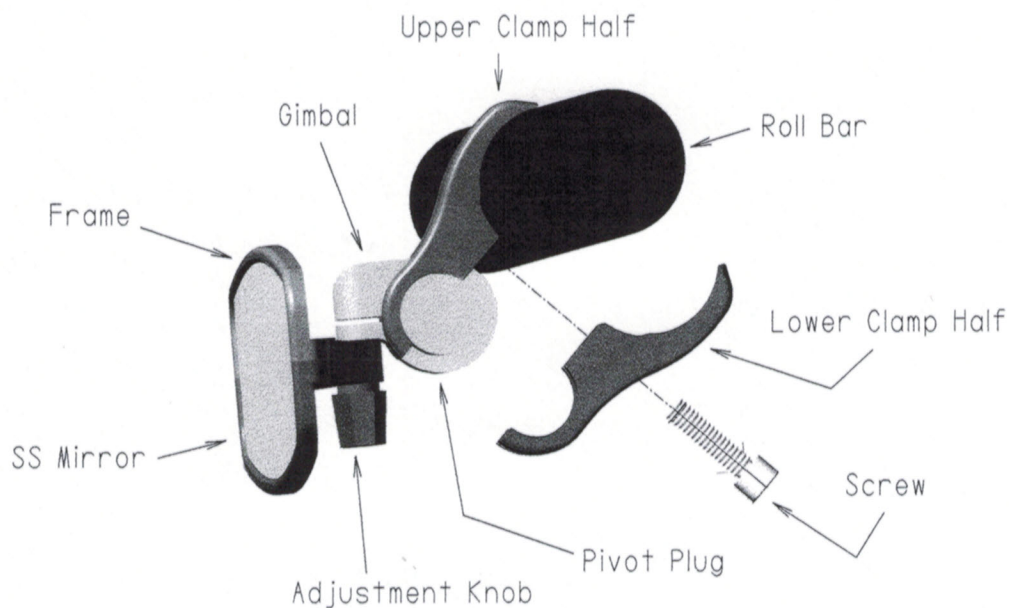

4. Sit in the driver seat. Loosen the Adjustment Knob and rotate the Gimbal up as far as it will go without moving the Clamp on the Roll Bar. Tighten the Adjustment Knob.
5. Rotate the Clamp Halves on the Roll Bar so the view in the mirror is set higher than the desired placement. Tighten the Screw to secure the Clamp halves to the Roll Bar.
6. Adjust the mirror view by loosening the Adjustment Knob and moving the mirror to the desired position. Tighten the Adjustment Knob.

Mirror is made from Polished Stainless Steel. Clean with warm soapy water. Dry with clean soft cloth to avoid scratching.